

SUITE 1003, FLATIRON BUILDING

31

# Bottom-Freezer Refrigerators

Safety Instructions ..... 2, 3

Operating Instructions

Care and Cleaning of  
the refrigerator ..... 6, 7

Control Settings ..... 4, 5

Installation Instructions

Preparing to Install  
the Refrigerator ..... 8

Reversing the Door Swing ..... 9-11

Troubleshooting Tips ... 12-14

Normal Operating Sounds ..... 12

Consumer Support

Consumer Support ..... 18

Product Registration ..... 15, 16

Warranty ..... 17

Owner's Manual and  
Installation Instructions

Model MBC12

La section française  
commence à la page 19.

Write the model and serial  
numbers here:

Model 134667700

Serial \_\_\_\_\_

You can find them on a label inside  
the refrigerator on the upper left  
side wall.

## IMPORTANT SAFETY INFORMATION. READ ALL INSTRUCTIONS BEFORE USING.

### ⚠ WARNING!

Use this appliance only for its intended purpose as described in this Owner's Manual.



### SAFETY PRECAUTIONS


When using electrical appliances, basic safety precautions should be followed, including the following:

- ❑ This refrigerator must be properly installed and located in accordance with the Installation Instructions before it is used.
- ❑ Do not allow children to climb, stand or hang on the shelves in the refrigerator. They could damage the refrigerator and seriously injure themselves.
- ❑ Do not touch the cold surfaces in the freezer compartment, particularly when hands are damp or wet. Skin may stick to these extremely cold surfaces.
- ❑ Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- ❑ In refrigerators with automatic icemakers, avoid contact with the moving parts of the ejector mechanism, or with the heating element that releases the cubes. Do not place fingers or hands on the automatic icemaking mechanism while the refrigerator is plugged in.
- ❑ Keep fingers out of the "pinch point" areas; clearances between the doors and between the doors and cabinet are necessarily small. Be careful closing doors when children are in the area.
- ❑ Unplug the refrigerator before cleaning and making repairs.

**NOTE:** We strongly recommend that any servicing be performed by a qualified individual.

- ❑ Turning the control to the **OFF** position does not remove power to the light circuit.
- ❑ Do not refreeze frozen foods which have thawed completely.
- ❑ **Before replacing a burned-out light bulb, the refrigerator should be unplugged** in order to avoid contact with a live wire filament. (A burned-out light bulb may break when being replaced.)

## ⚠ DANGER! RISK OF CHILD ENTRAPMENT PROPER DISPOSAL OF THE REFRIGERATOR

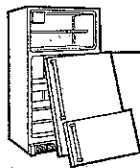

Child entrapment and suffocation are not problems of the past. Junked or abandoned refrigerators are still dangerous...even if they will sit for "just a few days." If you are getting rid of your old refrigerator, please follow the instructions below to help prevent accidents.


### **Before You Throw Away Your Old Refrigerator or Freezer:**

 - ❑ Take off the doors.
- ❑ Leave the shelves in place so that children may not easily climb inside.

### **Refrigerants**

All refrigeration products contain refrigerants, which must be removed prior to product disposal. If you are getting rid of an old refrigeration product, check with the company handling the disposal about what to do.

### USE OF EXTENSION CORDS



Because of potential safety hazards under certain conditions, we strongly recommend against the use of an extension cord.

However, if you must use an extension cord, it is absolutely necessary that it be a UL-listed (in the United States) or a CSA-listed (in Canada), 3-wire grounding type appliance extension cord having a grounding type plug and outlet and that the electrical rating of the cord be 15 amperes (minimum) and 120 volts.

## ⚠ WARNING!



### HOW TO CONNECT ELECTRICITY

*Do not, under any circumstances, cut or remove the third (ground) prong from the power cord. For personal safety, this appliance must be properly grounded.*

The power cord of this appliance is equipped with a 3-prong (grounding) plug which mates with a standard 3-prong (grounding) wall outlet to minimize the possibility of electric shock hazard from this appliance.

Have the wall outlet and circuit checked by a qualified electrician to make sure the outlet is properly grounded.

Where a standard 2-prong wall outlet is encountered, it is your personal responsibility and obligation to have it replaced with a properly grounded 3-prong wall outlet.

The refrigerator should always be plugged into its own individual electrical outlet which has a voltage rating that matches the rating plate.

This provides the best performance and also prevents overloading house wiring circuits which could cause a fire hazard from overheated wires.

Never unplug your refrigerator by pulling on the power cord. Always grip plug firmly and pull straight out from the outlet.

Repair or replace immediately all power cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length or at either end.

When moving the refrigerator away from the wall, be careful not to roll over or damage the power cord.



### USE OF ADAPTER PLUGS

 
*Adapter plugs are not permitted in Canada.*



**READ AND FOLLOW THIS SAFETY INFORMATION CAREFULLY.**

**SAVE THESE INSTRUCTIONS**

## About the control on the refrigerator.



The temperature control on your refrigerator regulates the temperature in the fresh food and freezer compartments. Initially set the control to the mid-setting for the refrigerator ( 5°C) and freezer (-18°C).

Adjust the control one degree at a time, and allow 12 hours after each adjustment for the refrigerator to reach the temperature you set.

Setting the refrigerator and freezer controls to OFF stops cooling in both compartments, but does not shut off power to the refrigerator.



### Control Settings

#### ON/OFF (refrigerator and freezer controls)

Pressing the **ON/OFF** button for either the refrigerator or freezer controls stops the cooling in the corresponding compartment. Press the button again to start cooling.

**NOTE:** Setting the controls to **OFF** does not shut off electrical power to the refrigerator.

#### Temperature Setting (refrigerator and freezer controls)

You can adjust the temperature setting in the refrigerator and freezer by pressing the **▲ (up)** or **▼ (down) TEMP** control button. The temperature you set will be displayed for 5 seconds; otherwise the actual temperature inside the compartment is displayed.

The refrigerator temperature setting range is from +2°C to +8°C. The freezer temperature setting range is from -24°C to -15°C.

**NOTE:** If you desire to use the freezer compartment for fresh food storage, you can set the temperature of the freezer compartment above 0°C (up to +8°C).

#### Super Cool

If you desire the temperature inside the refrigerator compartment to drop quickly, press the **SUPER COOL** button. Once the button is pressed, the **SUPER COOL** indicator illuminates and the temperature decreases rapidly until 2°C is achieved and then **SUPER COOL** automatically shuts off.

The refrigerator temperature will then slowly return to the original programmed temperature.

Press the **SUPER COOL** button or **▲▼** buttons if you desire to exit super cool mode.

## Super Freeze

If you desire the temperature inside the freezer compartment to drop quickly, press the SUPER FREEZE button. Once the button is pressed, the SUPER FREEZE indicator illuminates and the appliance will run continuously for 26 hours, thereby rapidly decreasing the freezer temperature.

Following this period the appliance will return to its normal cycling and operation, and the freezer temperature will return to the original programmed temperature.

Press the SUPER FREEZE button or ▲▼ buttons if you desire to exit SUPER FREEZE mode.

## Alarm

An alarm will sound under the following conditions:

1. DOOR ALARM - if refrigerator door is left open for 2 minutes the alarm will sound intermittently until it is turned off by pressing the ALARM button, or after 10 minutes it will automatically shut off.
2. FREEZER ALARM - If the freezer compartment temperature becomes warmer than -10°C, the Freezer Alarm indicator on the control panel will begin to flash and the alarm will sound intermittently. Press the ALARM button to cancel the alarm, or it will continue to sound intermittently for 2 minutes and stop automatically. The Freezer Alarm indicator will stay illuminated until the temperature drops below -10°C.

### NOTE:

1. When you first plug in the refrigerator, the Freezer Alarm indicator on the control panel will illuminate. Once the temperature drops below -10°C it will shut off.
2. The Freezer Alarm will not be triggered if you have set the temperature control of the freezer compartment higher than 0°C (using the compartment for fresh food storage).

## Care and cleaning of the refrigerator.

geappliances.ca

### Cleaning the Outside

**Keep the outside clean.** Wipe with a clean cloth lightly dampened with mild liquid dish detergent. Dry with a clean, soft cloth.

*Do not wipe the refrigerator with a soiled dish cloth or wet towel. These may leave a residue that can erode the paint. Do not use scouring pads, powdered cleaners, bleach or cleaners containing bleach because these products can scratch and weaken the paint finish.*

**Protect the paint finish.** The finish on the outside of the refrigerator is a high quality, baked-on paint finish. With proper care, it will stay new-looking and rust free for years. Apply a coat of kitchen/appliance wax when the refrigerator is new, and then at least twice a year.

### Cleaning the Inside

**To help prevent odors,** leave an open box of baking soda in the fresh food and freezer compartments.

**Unplug the refrigerator before cleaning.**

If this is not practical, wring excess moisture out of sponge or cloth when cleaning around switches, lights or controls.

Use warm water and baking soda solution—about a tablespoon (15 ml) of baking soda to a quart (1 liter) of water. This both cleans and neutralizes odors. Rinse and wipe dry.

Other parts of the refrigerator—including door gaskets, fruit and vegetable drawers, and all plastic parts—can be cleaned the same way.

After cleaning the door gaskets, apply a thin layer of petroleum jelly to the door gaskets at the hinge side. This helps keep the gaskets from sticking and bending out of shape. Do not use cleansing powders or other abrasive cleaners.

**Defrost water pan.** The non-removable pan is located under the compressor at the rear of the refrigerator. It should be cleaned at least once a year. Move the refrigerator out from the wall as far as necessary, and unplug the power cord from the wall outlet. Let the compressor cool before cleaning the pan. Use a clean cloth or sponge dampened in warm water and baking soda solution—one tablespoon (15 ml) of baking soda to a quart (1 liter) of water. **Do not use** cleansing powders, abrasive cleaners, bleach or cleaners containing chlorides.

*Do not wash any plastic refrigerator parts in the dishwasher.*

### Behind the Refrigerator

Once a year, move the refrigerator out and vacuum the back coils. Be careful when moving the refrigerator away from the wall. All types of floor coverings can be damaged, particularly cushioned coverings and those with embossed surfaces.

Pull the refrigerator straight out and return it to position by pushing it straight in. Moving the refrigerator in a side direction may result in damage to the floor covering or refrigerator.

*When pushing the refrigerator back, make sure you don't roll over the power cord.*

### Replacing the Light Bulb

Turning the refrigerator **OFF** does not remove power to the light circuit.

The bulb is located behind the shield in the ceiling.

- 1 Unplug the refrigerator.
- 2 Apply pressure with your hand near the back of the transparent light shield, pressing upwards and out towards you.

- 3 Replace the bulb with an appliance bulb of the same or lower wattage (10 Watt maximum).
- 4 Slide the light shield completely into position.

### Preparing for Vacation

For long vacations or absences, remove food and unplug the refrigerator. Clean the interior with a baking soda solution of one tablespoon (15 ml) of baking soda to one quart (1 liter) of water. Leave the doors open.

### Preparing to Move

Secure all loose items such as shelves and drawers by taping them securely in place to prevent damage.

*Be sure the refrigerator stays in an upright position during moving.*

# Installation Instructions

# Refrigerator

Model MBC12

If you have questions, call 1.800.561.3344 or visit our Website at: [geappliances.ca](http://geappliances.ca)

## BEFORE YOU BEGIN

Read these instructions completely and carefully.

- **IMPORTANT** — Save these instructions for local inspector's use.
- **IMPORTANT** — Observe all governing codes and ordinances.
- **Note to Installer** — Be sure to leave these instructions with the Consumer.
- **Note to Consumer** — Keep these instructions for future reference.
- **Skill level** — Installation of this appliance requires basic mechanical skills.
- **Completion time** — Refrigerator Installation  
15 minutes  
Reversing the Door Swing  
1 hour
- Proper installation is the responsibility of the installer.
- Product failure due to improper installation is not covered under the Warranty.

## REFRIGERATOR LOCATION

- Do not install the refrigerator where the temperature will go below 55°F (13°C) because it will not run often enough to maintain proper temperatures.
- Install it on a floor strong enough to support it fully loaded.
- Do not install it closer than 5" (13 cm) next to a range.

## CLEARANCES


For optimal performance of your refrigerator, the following clearances are recommended:

- Sides  $\frac{3}{8}$ " (0.9 cm)
- Top 1" (2.5 cm)
- Back 2" (5 cm)

## LEVELING LEGS

Adjustable legs at the front corners of the refrigerator should be set so the refrigerator is firmly positioned on the floor, and the front is raised just enough that the door closes easily when opened about halfway.

To adjust the leveling legs, turn the legs clockwise to raise the refrigerator, counterclockwise to lower it.

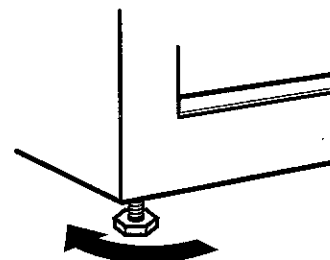

To raise the refrigerator

## INSTALLING THE HANDLES

Remove the plug buttons from the left side of the doors. Install the handles using the screws provided, and snap screw covers in place.



# Installation Instructions

## REVERSING THE DOOR SWING

### IMPORTANT NOTES

When reversing the door swing:

- Read the instructions all the way through before starting.
- Handle parts carefully to avoid scratching paint.
- Set screws down by their related parts to avoid using them in the wrong places.
- Provide a non-scratching work surface for the doors.

**IMPORTANT:** Once you begin, do not move the cabinet until door-swing reversal is completed.

These instructions are for changing the hinges from the right side to the left side—if you ever want to change the hinges back to the right side, follow these same instructions and reverse all references to left and right.

**Unplug the refrigerator from its electrical outlet.**

**Empty all door shelves.**

### TOOLS YOU WILL NEED



3/8" and 5/16" Socket driver



Thin-blade screwdriver



Phillips screwdriver




Masking tape

### 1 REMOVE THE TOP COVER

- A** Using a Phillips screwdriver, remove the 5 screws holding the top cover in place (3 at the rear, 2 on the top).
- B** Slide the top cover back and up in order to remove it and expose the top hinge.

### 2 REMOVE THE FRESH FOOD DOOR

- A** Prior to removing the top hinge, tape the door shut with masking tape. This will secure the door in place as you remove the hinge.
- B** Remove the hinge using a 5/16" socket driver.

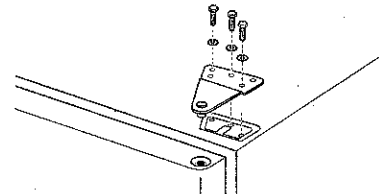

- C** Remove the cover plate and bolts from the left side to allow transfer of the top hinge to the left side in step 8.
- D** Remove the tape and tilt the door away from the cabinet. Lift the door off the center hinge pin.
- E** Set the door on a non-scratching surface.


**⚠ CAUTION:** Do not let door drop to the floor.

# Installation Instructions

## REVERSING THE DOOR SWING (CONT.)

### 3 REMOVE THE FREEZER DOOR

- A** Tape the door shut with masking tape.
- B** Remove the center hinge and shim(s) by removing the screws. Be sure to keep the shim(s).

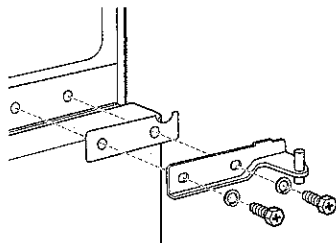

- C** Remove the tape and lift the door off the bottom hinge pin.
- D** Set the door on a non-scratching surface.

**▲ CAUTION:** Do not let door drop to the floor.

### 4 INSTALLING THE DOOR STOPS


- A** With the doors laying on a non-scratching surface, remove the door stop from the bottom of each door using a Phillips screw driver.
- B** Retrieve new door stops from the accessory bag.
- C** Install new door stop on the opposite side of each door by fully inserting the pin into the hole in the door. You may have to clear the hole of insulation foam using a screw driver. Secure each door stop in place with the screw provided.

### 5 TRANSFER BOTTOM HINGE TO THE LEFT

- A** Remove the bottom hinge bolts with a 5/16" socket driver. Discard the hinge to the accessory bag, saving the shim(s).
- B** Using a flat blade screw driver, remove the bottom hinge hole covers from the left side and transfer to the right side.
- C** Retrieve a new bottom hinge from the accessory bag and install the new hinge and shim(s) on the left side. Do not tighten the bolts completely.

### 6 REHANG THE FREEZER DOOR


- A** Place the freezer door on the bottom hinge, close the door, **MAKE SURE IT IS ALIGNED PROPERLY**, and tape it in place with masking tape.
- B** Tighten the bottom hinge bolts completely, ensuring that the door is level and aligned properly.

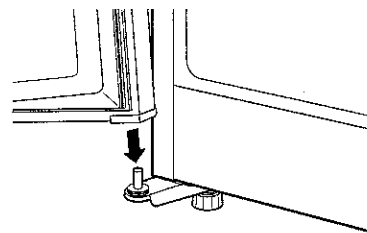


# Installation Instructions

## 7 INSTALL CENTER HINGE ON THE LEFT

- A** Remove the two plug buttons on the left side and install them on the right. Remove the mullion screw and screw cover on the left side with a Phillips screwdriver and install on the right.

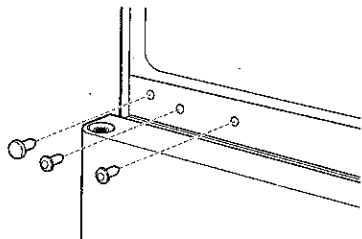

- B** Rotate the center hinge and shim(s) 180 degrees and install on the left side as shown. Make sure that the hinge pin inserts into the hole in the top of the freezer door.

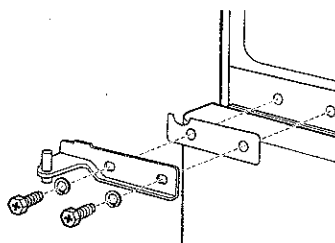


- C** Tighten the screws and remove the tape holding the door shut.

**▲ CAUTION:** When assembled correctly, the hinge is tight against the cabinet.

**ATTENTION:** The screws must be properly tightened. Turn the screws until snug. Then tighten the screws a minimum of 1/2 turn using both hands.

## 8 REHANG THE FRESH FOOD DOOR

- A** Using a 3/8" socket driver, remove the nut and locking washer that is holding the top hinge pin in place. Once removed, insert the threaded part of the hinge pin through the opposite side of the hinge bracket (thereby reversing the top hinge).
- B** Secure the hinge pin in the bracket by installing the locking washer and tightening the nut.
- C** Place the fresh food door onto the center hinge, close the door, **MAKE SURE IT IS PROPERLY ALIGNED**, and tape it in place with masking tape.
- D** Install the top hinge on the left side so that the hinge pin inserts into the hole in the top of the fresh food door. Tighten the bolts, ensuring that the door is level and aligned properly.

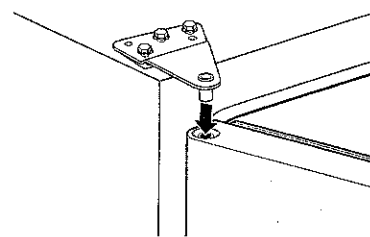

- E** Transfer the other hinge cover to the right side and secure with bolts.

## 9 INSTALL TOP COVER

- A** Re-install the top cover, sliding it into place and securing with the 5 original screws.

## 10 REVERSING THE HANDLES

- A** Follow instructions for installing the Handles (page 8) for the right side.
- B** Transfer the plug buttons from the right side to the left side to cover the holes.

## Normal operating sounds.



Newer refrigerators sound different from older refrigerators. Modern refrigerators have more features and use newer technology.

**Do you hear what I hear? These sounds are normal.**

### **HUMMM... WHOOSH...**

- The new high efficiency compressor may run faster and longer than your old refrigerator and you may hear a high-pitched hum or pulsating sound while it is operating.
- You may hear a whooshing sound when the doors close. This is due to pressure equalizing within the refrigerator.

### **WHIR!**



- You may hear the fans spinning at high speeds. This happens when the refrigerator is first plugged in, when the doors are opened frequently or when a large amount of food is added to the refrigerator or freezer compartments. The fans are helping to maintain the correct temperatures.

### **CLICKS, POPS, CRACKS and CHIRPS**

- You may hear cracking or popping sounds when the refrigerator is first plugged in. This happens as the refrigerator cools to the correct temperature.
- The compressor may cause a clicking or chirping sound when attempting to restart (this could take up to 5 minutes).
- Expansion and contraction of cooling coils during and after defrost can cause a cracking or popping sound.
- On models with an icemaker, after an icemaking cycle, you may hear the ice cubes dropping into the ice bucket.

### **WATER SOUNDS**



- The flow of refrigerant through the freezer cooling coils may make a gurgling noise like boiling water.
- Water dropping on the defrost heater can cause a sizzling, popping or buzzing sound during the defrost cycle.
- A water dripping noise may occur during the defrost cycle as ice melts from the evaporator and flows into the drain pan.
- Closing the door may cause a gurgling sound due to pressure equalization.

## Before you call for service...

geappliances.ca



### Troubleshooting Tips

Save time and money! Review the charts on the following pages first and you may not need to call for service.

Problem	Possible Causes	What To Do
Refrigerator does not operate	Refrigerator in defrost cycle.	• Wait about 30 minutes for defrost cycle to end.
	Control IS TURNED OFF.	• Press <b>ON/OFF</b> button and check for operation to begin.
	Refrigerator is unplugged.	• Push the plug completely into the outlet.
	The fuse is blown/circuit breaker is tripped.	• Replace fuse or reset the breaker.
Vibration or rattling (slight vibration is normal)	Front leveling legs need adjusting.	• See <i>Leveling Legs</i> .
Motor operates for long periods or cycles on and off frequently. (Modern refrigerators with more storage space and a larger freezer require more operating time. They start and stop often to maintain even temperatures.)	Normal when refrigerator is first plugged in.	• Wait 24 hours for the refrigerator to completely cool down.
	Often occurs when large amounts of food are placed in refrigerator.	• This is normal.
	Door left open.	• Check to see if package is holding door open.
	Hot weather or frequent door openings.	• This is normal.
Fresh food or freezer compartment too warm	Temperature control set at the coldest setting.	• See <i>About the control</i> .
	Warm weather or frequent door openings.	• Set the temperature control one step colder. See <i>About the control</i> .
	Door left open.	• Check to see if package is holding door open.
Frost or ice crystals on frozen food (frost within package is normal)	Door left open.	• Check to see if package is holding door open.
	Too frequent or too long door openings.	
Ice cubes have odor/taste	Food transmitting odor/taste to ice cubes.	• Wrap foods well.
	Interior of refrigerator needs cleaning.	• See <i>Care and cleaning</i> .
Slow ice cube freezing	Door left open.	• Check to see if package is holding door open.
	Temperature control not set cold enough.	• See <i>About the control</i> .

Safety Instructions

Operating Instructions

Installation Instructions

Troubleshooting Tips

Consumer Support

## Before you call for service...



### Troubleshooting Tips

Problem	Possible Causes	What To Do
Refrigerator has odor	Foods transmitting odor to refrigerator.	<ul style="list-style-type: none"> <li>• Foods with strong odors should be tightly wrapped.</li> <li>• Keep an open box of baking soda in the refrigerator; replace every three months.</li> </ul>
	Interior needs cleaning.	<ul style="list-style-type: none"> <li>• See <i>Care and cleaning</i>.</li> </ul>
	Defrost water pan needs cleaning.	<ul style="list-style-type: none"> <li>• See <i>Care and cleaning</i>.</li> </ul>
Moisture forms on outside of refrigerator	Not unusual during periods of high humidity.	<ul style="list-style-type: none"> <li>• Wipe surface dry.</li> </ul>
Moisture collects inside (in humid weather, air carries moisture into refrigerator when doors are opened)	Too frequent or too long door openings.	
Interior light does not work	No power at outlet.	<ul style="list-style-type: none"> <li>• Replace fuse or reset the breaker.</li> </ul>
	Light bulb burned out.	<ul style="list-style-type: none"> <li>• See <i>Replacing the light bulb</i>.</li> </ul>

---

Please place in envelope and mail to:  
Veuillez mettre dans une enveloppe et envoyez à :

**OWNERSHIP REGISTRATION  
P.O. BOX 1780  
MISSISSAUGA, ONTARIO  
L4Y 4G1**

**(FOR CANADIAN CONSUMERS ONLY -  
POUR RÉSIDENTS CANADIENS SEULEMENT)**

---



For Canadian  
Customers



Pour les  
consommateurs  
canadiens

CUT ALONG THIS LINE AND RETURN CARD - THANKS  
DÉCOUPEZ ICI ET ENVOYEZ LA FICHE - MERCI

### OWNERSHIP REGISTRATION CERTIFICATE - FICHE D'INSCRIPTION DU PROPRIÉTAIRE

Please register your product to enable us to contact you in the remote event a safety notice is issued for this product and to allow for efficient communication under the terms of our warranty, should the need arise.

Veuillez enregistrer votre produit afin de nous permettre de communiquer avec vous si jamais un avis de sécurité concernant ce produit était émis et de communiquer facilement avec vous en vertu de votre garantie, si le besoin s'en fait sentir.

REGISTER ON-LINE: [www.geappliances.ca](http://www.geappliances.ca)

MAIL TO:

P.O. BOX 1780, MISSISSAUGA

ENREGISTREMENT SUR INTERNET À: [www.electromenagersge.ca](http://www.electromenagersge.ca)

POSTEZ À:

ONTARIO, L4Y 4G1

☐ MR. / M.

☐ MRS. / MME

FIRST NAME / PRÉNOM

LAST NAME / NOM

☐ MISS/Mlle

☐ MS.

STREET NO / N° RUE

STREET NAME / RUE

APT./NO/APP./RR#

CITY / VILLE

PROVINCE

POSTAL CODE/CODE POSTAL

AREA CODE/IND. RÉG.

TELEPHONE/TÉLÉPHONE

E-MAIL/COURRIEL

DID YOU PURCHASE A SERVICE CONTRACT FOR THIS APPLIANCE?

YES/OUI

☐

IF YES/SI OUI: EXPIRATION

AVEZ-VOUS ACHETÉ UN CONTRAT DE SERVICE POUR CET APPAREIL ?

NO/NON

☐

Y/A

M

DU

NAME OF SELLING DEALER / NOM DU MARCHAND

MODEL / MODÈLE

INSTALLATION DATE / DATE D'INSTALLATION

Y/A

M

DU

CORRESPONDENCE

CORRESPONDANCE

☐ ENGLISH

☐ FRANÇAIS

SERIAL / SÉRIE

☐ I do not wish to receive any promotional offers regarding this product.

Je ne désire pas recevoir d'offres promotionnelles concernant ce produit.



# Refrigerator Warranty.



All warranty service provided by our Factory Service Centers, or an authorized Customer Care® technician. To schedule service, on-line, visit us at [geappliances.ca](http://geappliances.ca), or call 1.800.561.3344. Please have serial number and model number available when calling for service.

Staple your receipt here.  
Proof of the original purchase date is needed to obtain service under the warranty.

## For The Period Of: Mabe Will Replace:

### One Year

From the date of the original purchase

**Any part** of the refrigerator which fails due to a defect in materials or workmanship. During this **limited one-year warranty**, Mabe will also provide, **free of charge**, all labor and related service to replace the defective part.

## What Mabe Will Not Cover:

- Service trips to your home to teach you how to use the product.
- Improper installation, delivery or maintenance.
- Failure of the product if it is abused, misused, or used for other than the intended purpose or used commercially.
- Loss of food due to spoilage.
- Replacement of house fuses or resetting of circuit breakers.
- Damage caused after delivery.
- Replacement of the water filter cartridge, if included, due to water pressure that is outside the specified operating range or due to excessive sediment in the water supply.
- Replacement of the light bulbs, if included, or water filter cartridge, if included, other than as noted above.
- Damage to the product caused by accident, fire, floods or acts of God.
- Incidental or consequential damage caused by possible defects with this appliance.
- Product not accessible to provide required service.

**EXCLUSION OF IMPLIED WARRANTIES**—Your sole and exclusive remedy is product repair as provided in this Limited Warranty. Any implied warranties, including the implied warranties of merchantability or fitness for a particular purpose, are limited to one year or the shortest period allowed by law.

This warranty is extended to the original purchaser and any succeeding owner for products purchased for home use within Canada.

In home warranty service will be provided in areas where it is available and deemed reasonable to provide.

**Warrantor: Mabe Canada Inc., Burlington, ON L7R 5B6**

Safety Instructions

Operating Instructions

Installation Instructions

Troubleshooting Tips

Consumer Support

## Consumer Support.


---



### GE Appliances Website

**geappliances.ca**


Have a question or need assistance with your appliance? Try the GE Appliances Website 24 hours a day, any day of the year! For greater convenience and faster service, you can now download Owner's Manuals, order parts or even schedule service on-line.

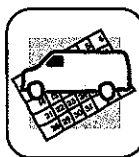

### Schedule Service

**1.800.561.3344 or geappliances.ca**

Expert GE repair service is only one step away from your door. Get on-line and schedule your service at your convenience any day of the year! Or call 1.800.561.3344 during normal business hours.

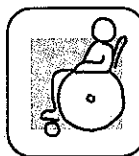

### Real Life Design Studio

**geappliances.ca**

GE supports the Universal Design concept—products, services and environments that can be used by people of all ages, sizes and capabilities. We recognize the need to design for a wide range of physical and mental abilities and impairments. For details of GE's Universal Design applications, including kitchen design ideas for people with disabilities, check out our Website today.



### Extended Warranties

**1.888.261.2133 or geappliances.ca**

Purchase a GE extended warranty and learn about special discounts that are available while your warranty is still in effect. You can purchase it on-line anytime, or call 1.888.261.2133 during normal business hours. GE Consumer Home Services will still be there after your warranty expires.



### Parts and Accessories

**1.800.661.1616 or geappliances.ca**

Individuals qualified to service their own appliances can have parts or accessories sent directly to their homes (VISA, MasterCard and Discover cards are accepted). Order on-line today, 24 hours every day or by phone at 1.800.661.1616 during normal business hours.

**Instructions contained in this manual cover procedures to be performed by any user. Other servicing generally should be referred to qualified service personnel. Caution must be exercised, since improper servicing may cause unsafe operation.**



### Contact Us

**geappliances.ca**

If you are not satisfied with the service you receive from GE, contact us on our Website with all the details including your phone number, or write to:

Director, Consumer Relations  
Mabe Canada Inc.  
Suite 310, 1 Factory Lane  
Moncton, NB, E1C 9M3



### Register Your Appliance

**geappliances.ca**

**Register your new appliance on-line—at your convenience!** Timely product registration will allow for enhanced communication and prompt service under the terms of your warranty, should the need arise. You may also mail in the pre-printed registration card included in the packing material.